 
 


GETTING STARTED WITH YOUR DECT PHONE

Install your DECT Phone

1. Connect the output plug of the mains adapter to the socket on the back of the charger unit and the mains adapter to the wall mains supply.
2. Place the 2 recargable NiMH AAA batteries size AAA 1.2V 750mAh (included), observing their polarities, into the battery compartment of the handset. Slide the battery door firmly into place.
3. Place the handset on the charger unit and let the batteries charge for a full 14 hours before using it for the first time.

Note: The handset may get warm during initial charge.



To register the DECT phone.

1. Press the 'Page' button for **4 seconds**. This button is located on the front of the Micro unit. This places the system in registration mode for 30 seconds.
(You will know that the Call Switch IP is in registration mode when the power led flashes red and green).
(Press for 5 seconds to set the Call Switch IP in registration mode)
2. Press 'REG' on the DECT phone
3. Press OK for 'REGISTER'
4. Enter 1234 as the PIN. Press OK
5. The phone will now register to the Call Switch IP



Note: Pressing the 'Page' button normally (for less than 2 seconds) rings all DECT phones registered to the system. This can be used to locate misplaced DECT phones.

Safety precautions:

- Do not allow the handset to come into contact with liquids or moisture.
- Do not allow the charging contacts or the battery to come into contact with conductive materials.
- Do not use the handset in an explosive hazard area such as where there is gas leaking.
- Because the phone works by sending radio signals between the base unit and the handset, wearers of hearing aids may experience interference in the form of a humming noise.
- We advise that this phone should not be used near intensive care medical equipment or by persons with pacemakers.
- Your phone can interfere with electrical equipment such as answering machines, TV and radio sets, clock radios and computers if placed too close. It is recommended that you position the Call Switch IP at least one meter from such appliance

	<p>Use only the mains adapter supplied with this telephone. Incorrect adapter polarity or voltage can seriously damage the telephone. Input: 230 VAC 50 Hz Output: 9 VDC 300 mA</p>
--	---

	<p>THERE IS A RISK OF EXPLOSION IF THE BATTERY IS REPLACED BY AN INCORRECT TYPE. Never use nonrechargeable batteries. Use two rechargeable NiMH batteries, size AAA 1.2V 750mAh (HR10/44) only. NiMH batteries must be disposed of in accordance with the applicable waste disposal regulations.</p>
--	--