



First Steps Quick Guide



ECOSYS
M5526cdw



1. PREFACE


This guide only provides basic advice to get you up and running as quickly as possible. A detailed operation guide is available on our website.

For your convenience, Vox offers a remote or onsite installation option, should you need further assistance with the setup of your printer. A Vox engineer will either assist you remotely or at your premises, depending on the option you select.

Please email printsupport@voxtelcom.co.za should you be interested in remote or onsite support. Please note this is a billable engagement.


2. UNBOXING YOUR PRINTER

Please make sure that all the orange strips are removed from the printer in order to ensure proper operation

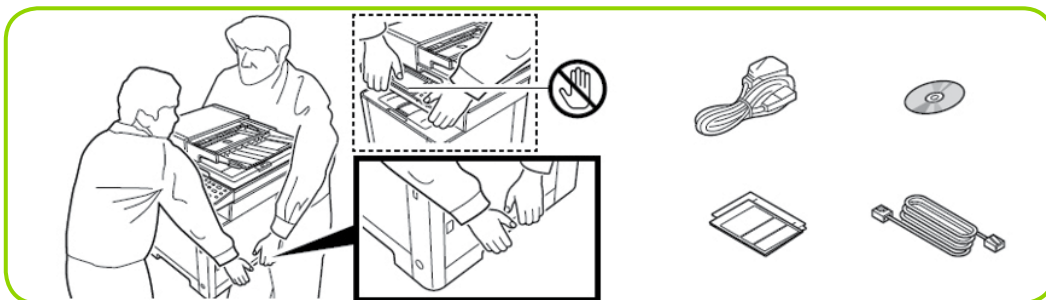

3. SETTING UP THE TONER

Please make sure that all the orange strips are removed from the printer in order to ensure proper operation

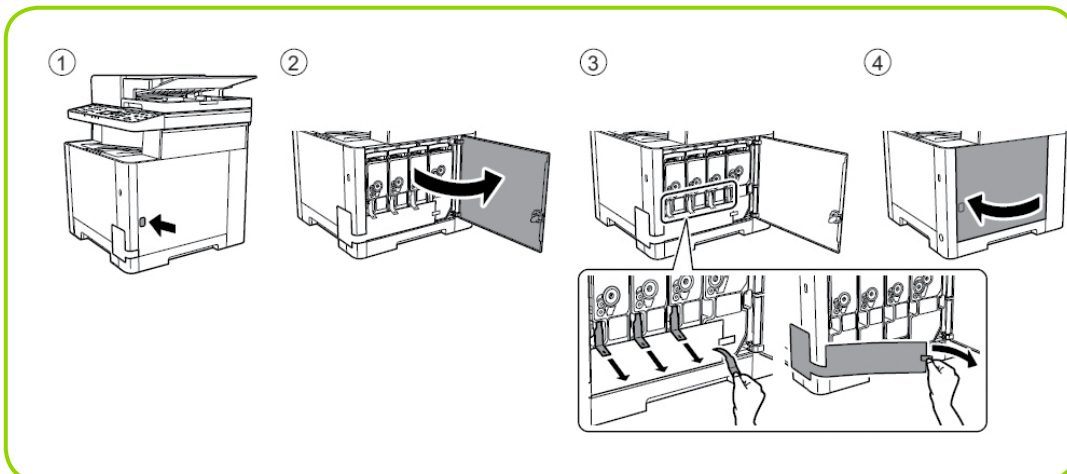


Visit us at vox.co.za




4. WORKSTATION DRIVER & UTILITIES INSTALLATION


1. Download the printer drivers from Kyocera's website.
 - URL: <https://www.kyoceradocumentsolutions.co.za/en/support/downloads.html>
2. Select your model

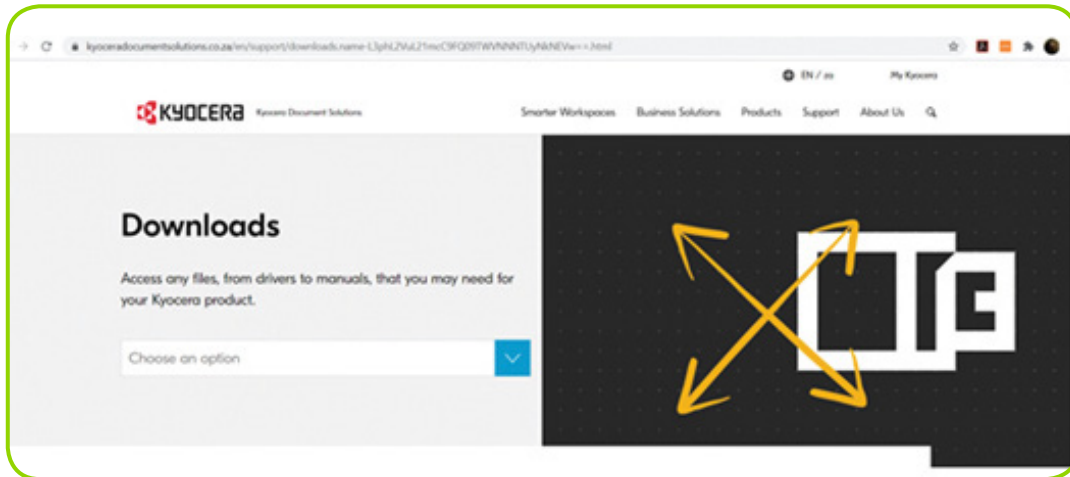


3. Select the relevant driver based on the client's operating system and click on download, use the KX driver where possible.
4. Find the ZIP file in your downloads folder, right click and select Extract all

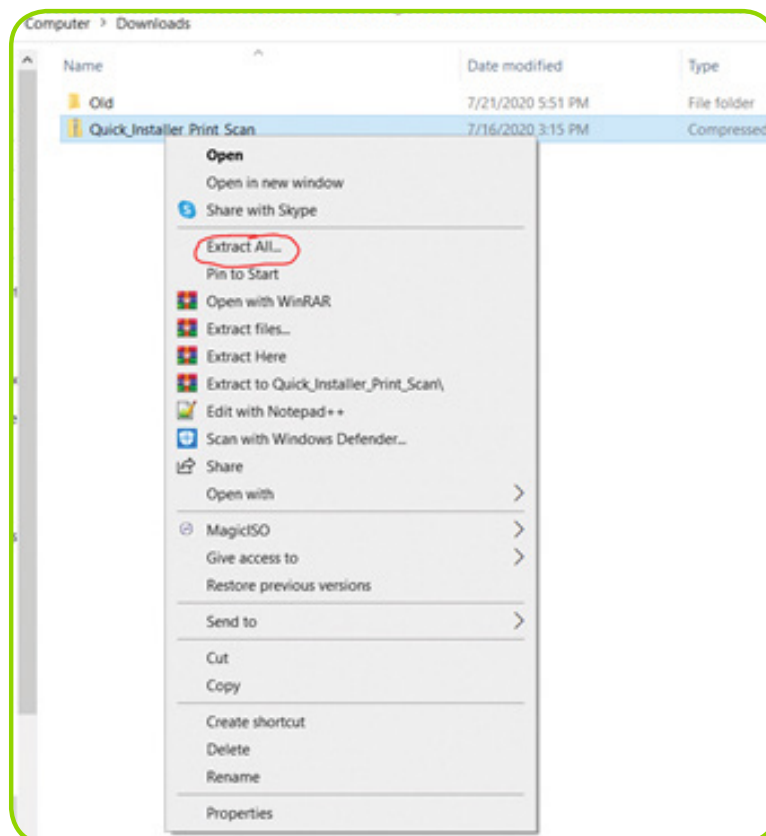

5. Open the extracted folder, find the setup icon and double click to run the setup.

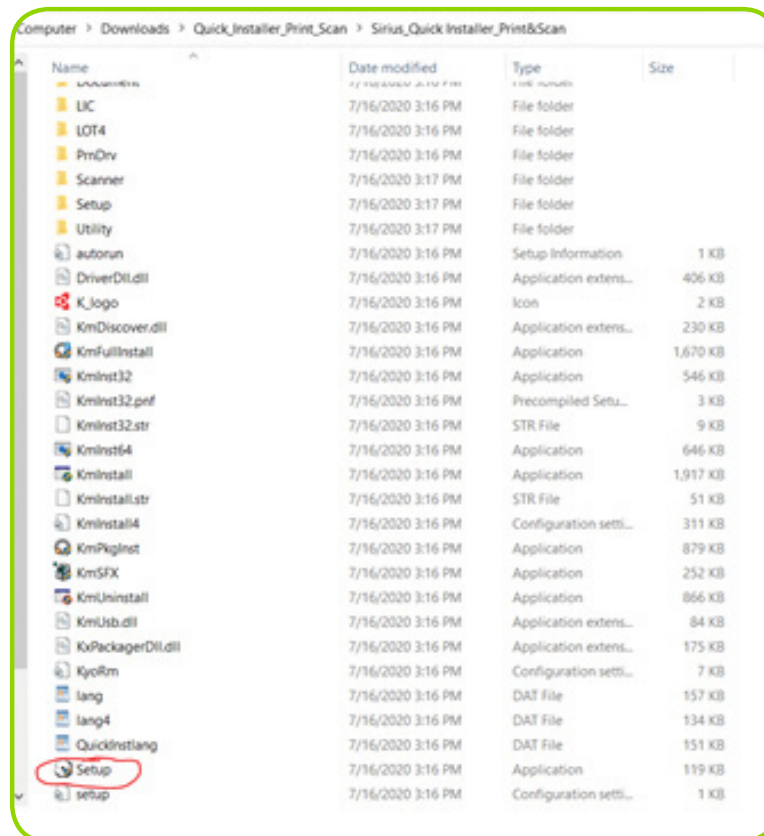


6. Accept the license agreement

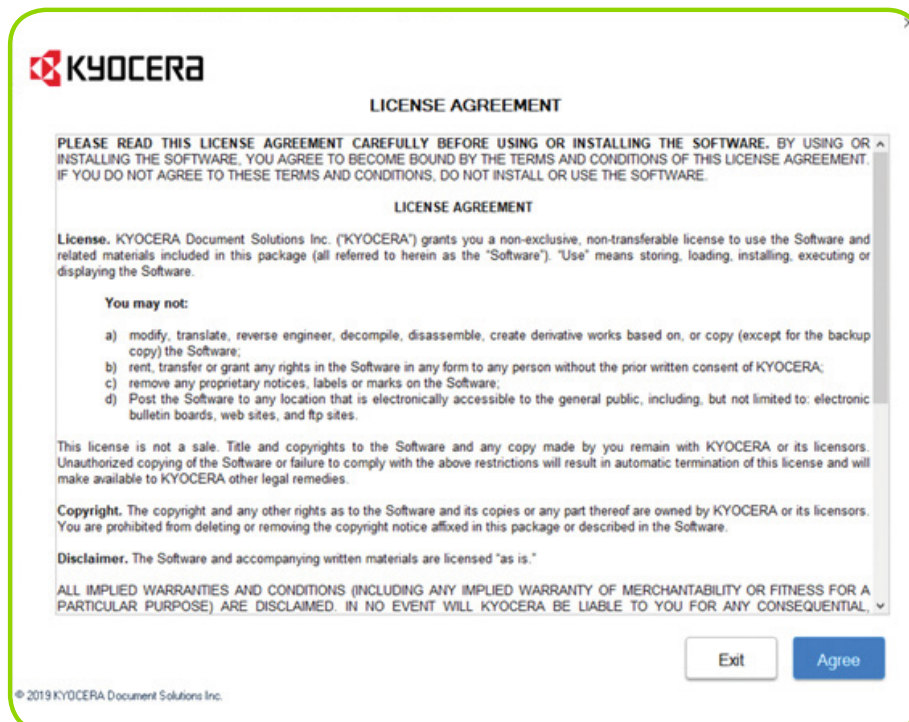


Visit us at vox.co.za




7. Select Quick Installer

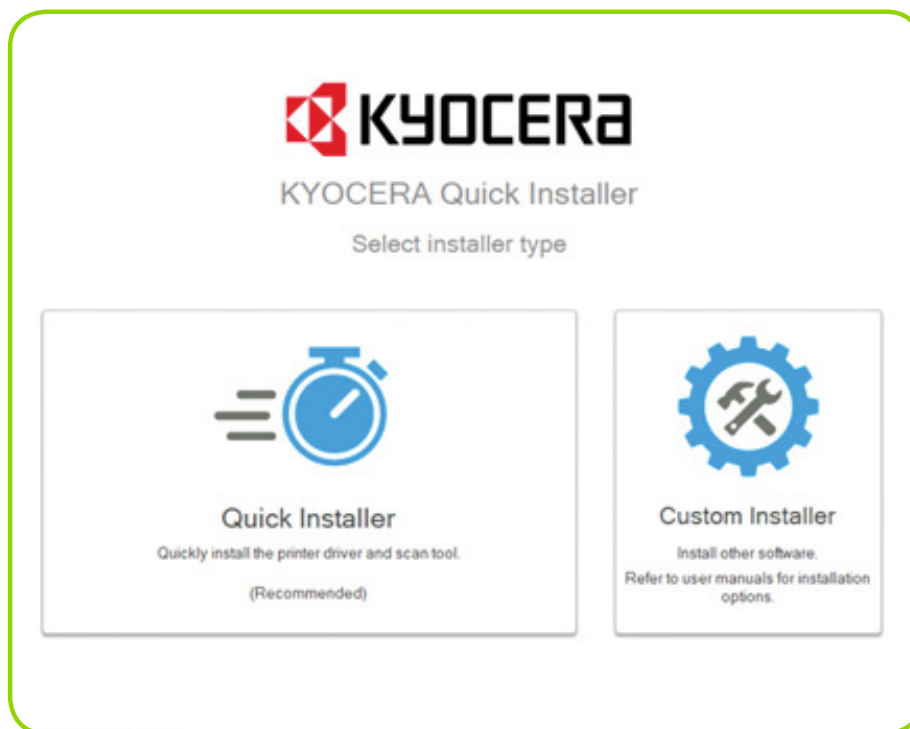


8. Select your printer and click on install

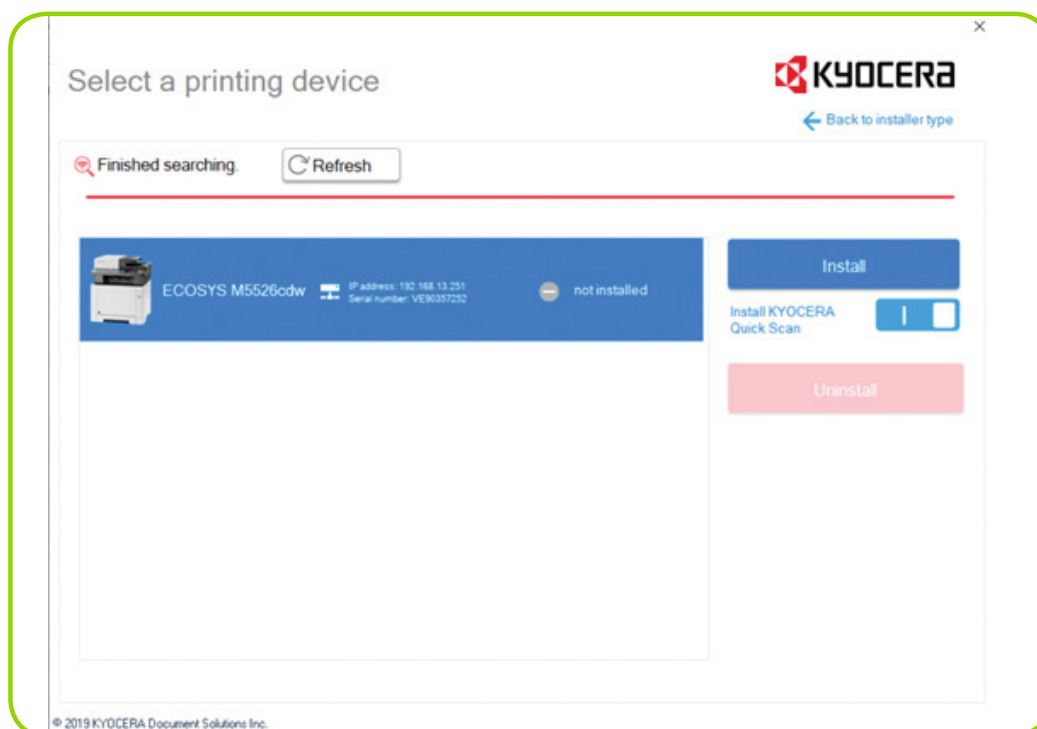

9. Click OK to add Shortcuts to the Desktop:

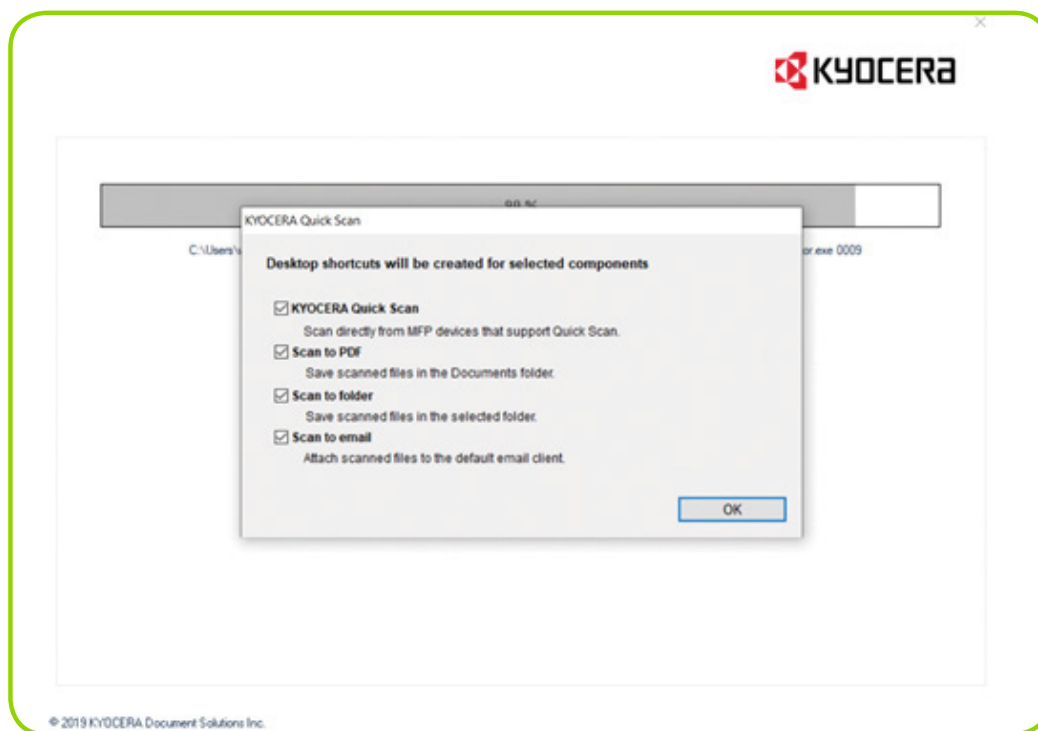

10. Save and Exit Installer

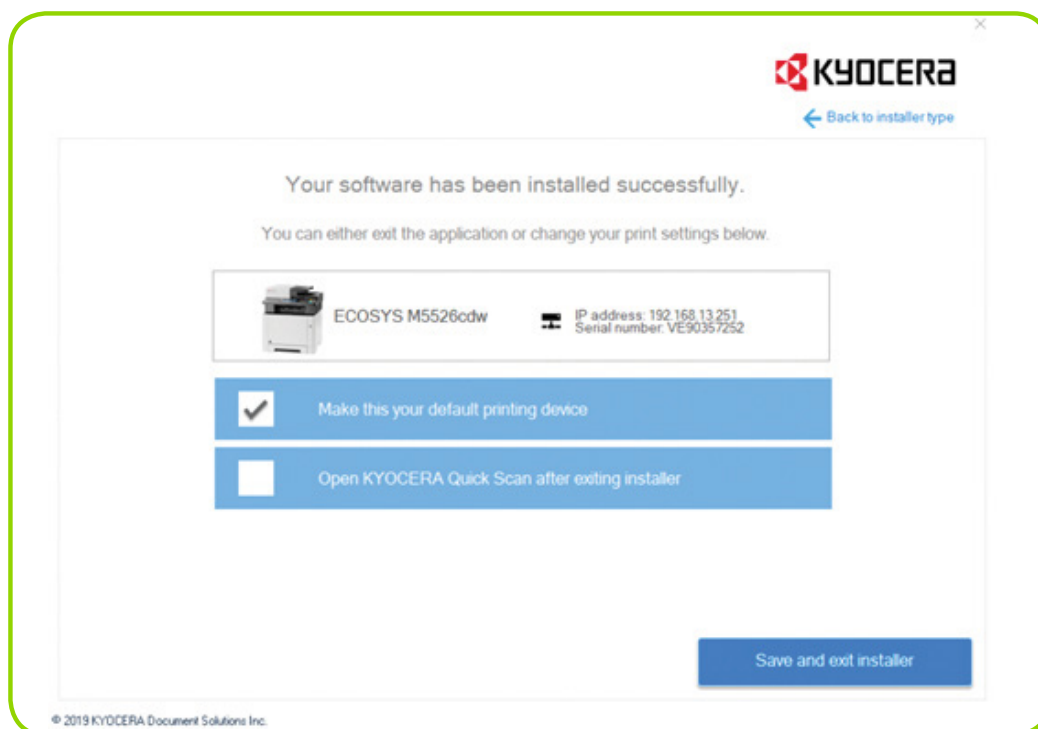


5. GETTING YOUR KYOCERA ECOSYS M5526CDW ONTO A WIRELESS NETWORK.


1. Enter the System Menu and access System/Network




SELECT THE SYSTEM MENU/COUNTER
BUTTON TO ENTER THE SYSTEM MENU

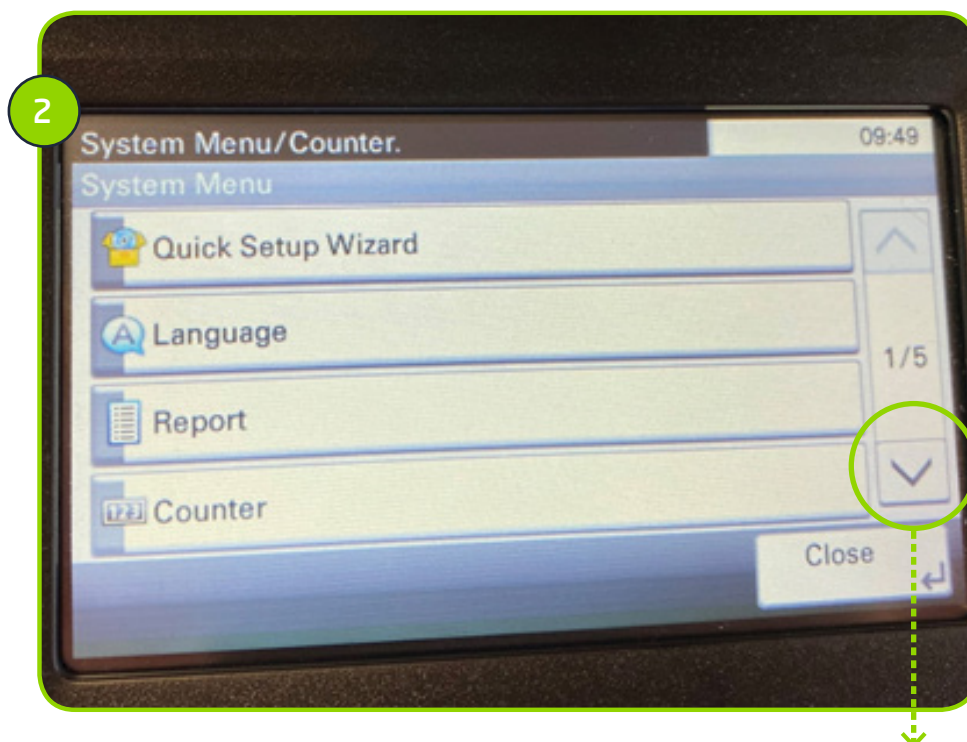


SELECT THE ARROW UNTIL
YOU GET TO SCREEN 4 OF 5

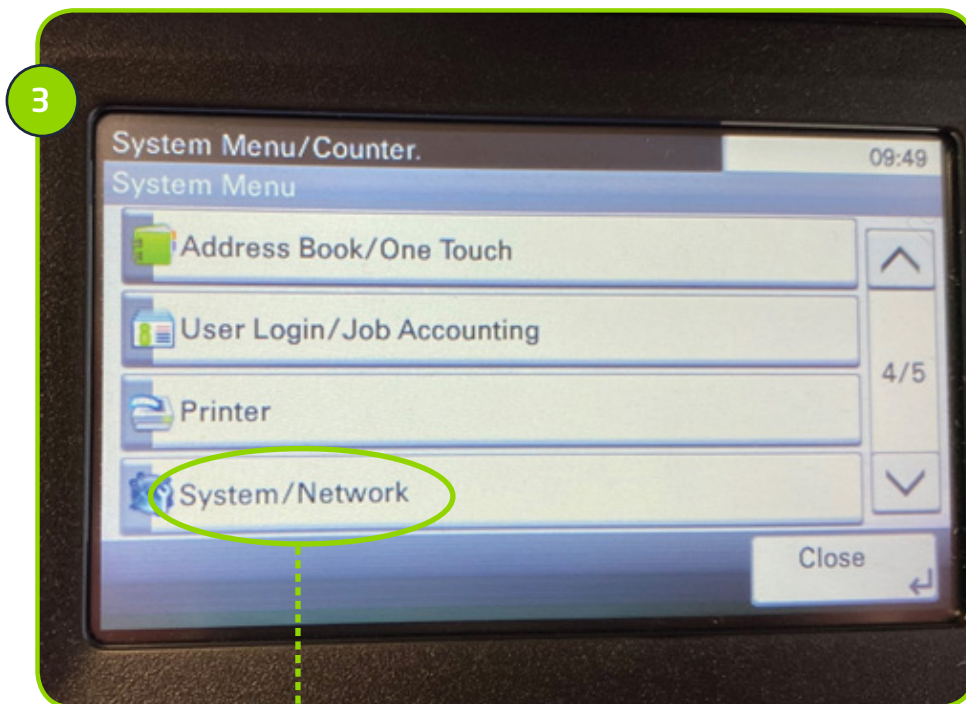


SELECT SYSTEM/NETWORK

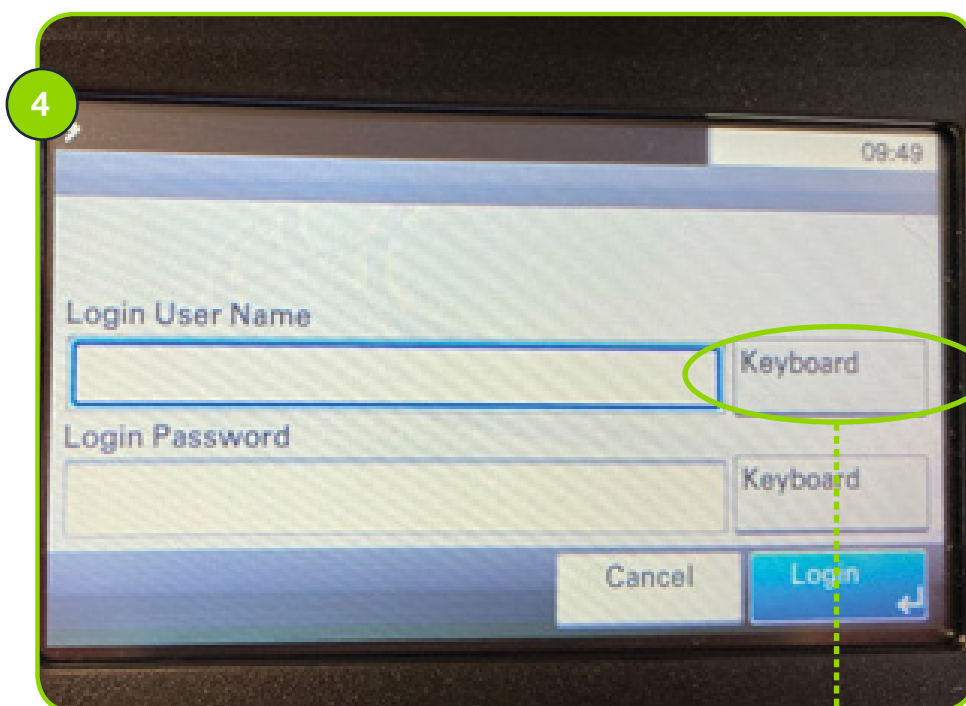

USE THE KEYBOARD TO ENTER
THE USERNAME AND PASSWORD.
FOR THIS DEVICE THE USERNAME
AND PASSWORD ARE BOTH **Admin**


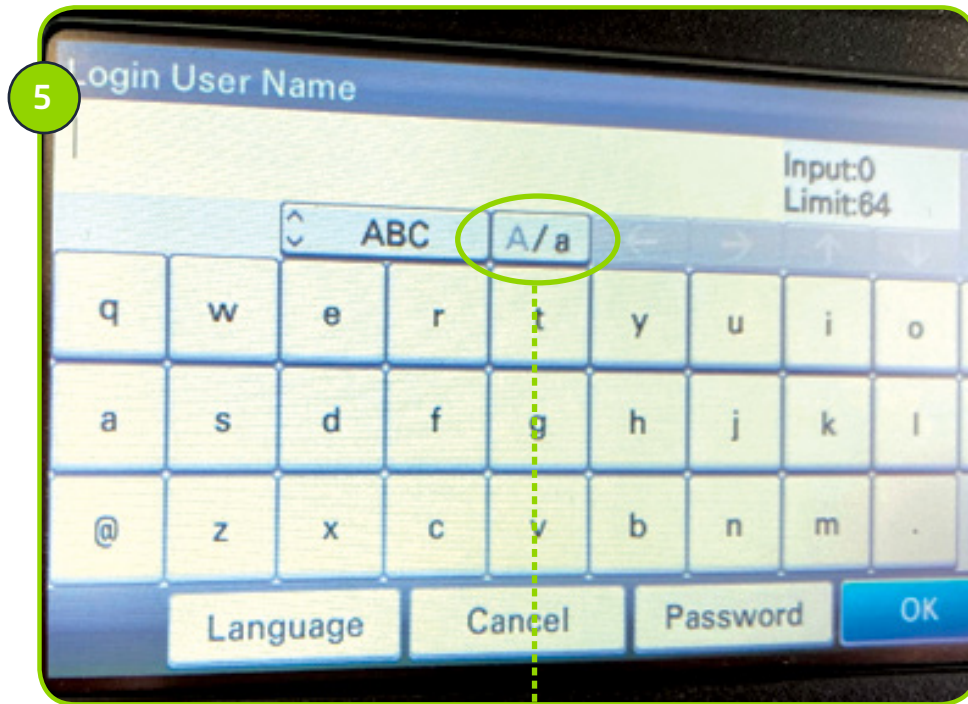



TO MOVE BETWEEN UPPERCASE AND LOWERCASE, SELECT THE **A/a** BUTTON ON THE SCREEN

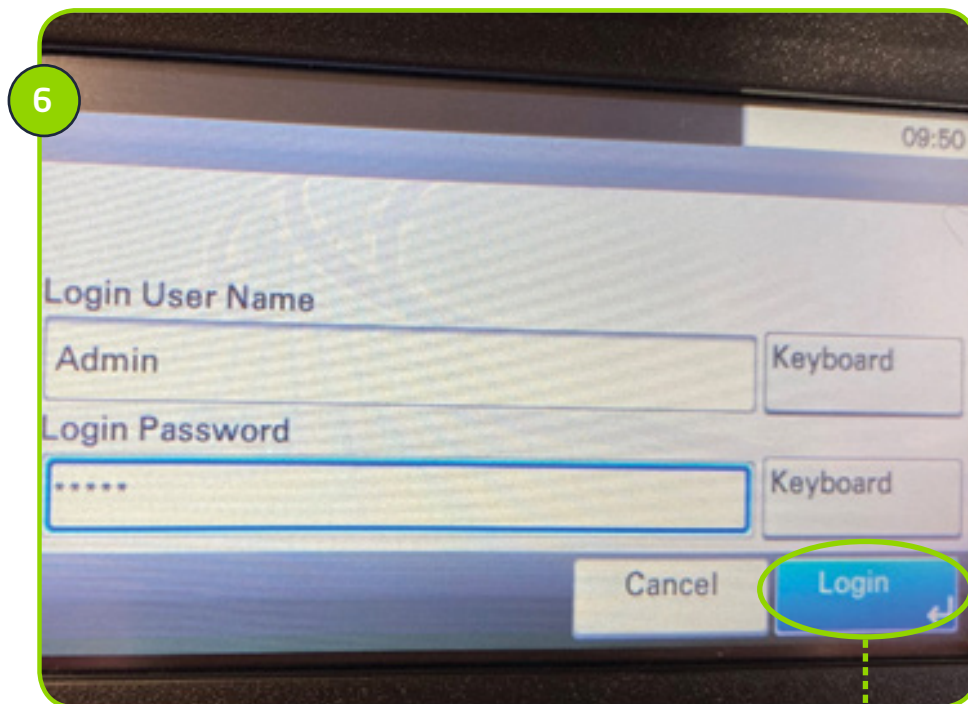


ONCE THE USERNAME AND PASSWORD HAVE BEEN ENTERED, SELECT LOGIN


2. Enter Network settings

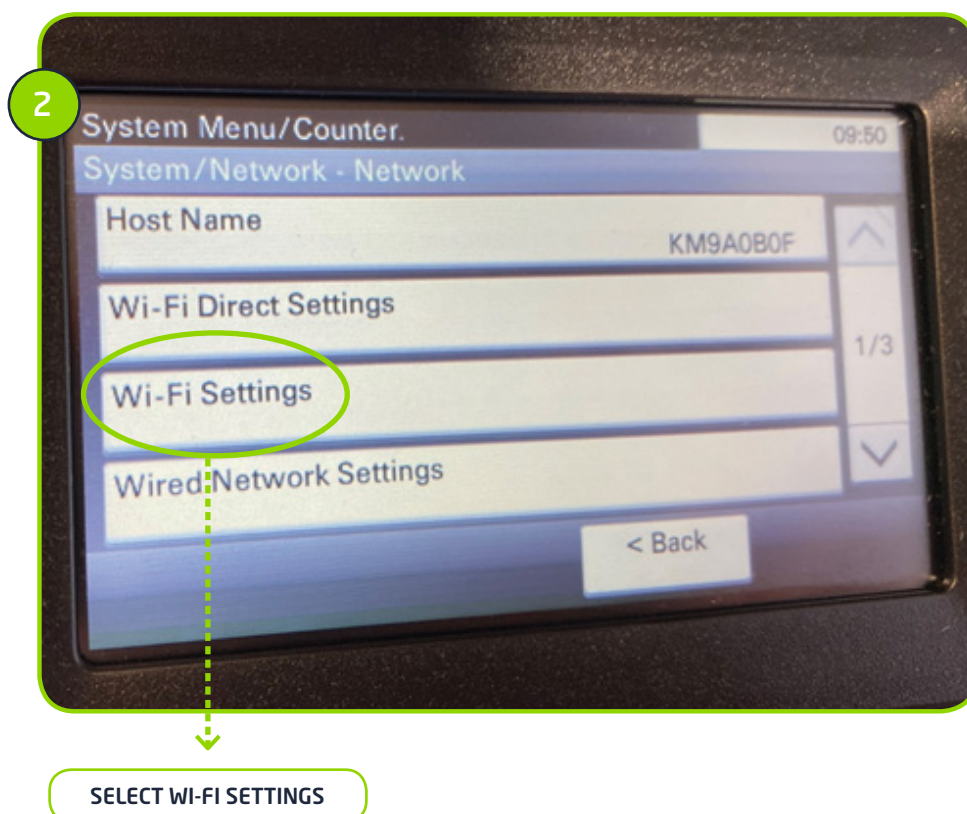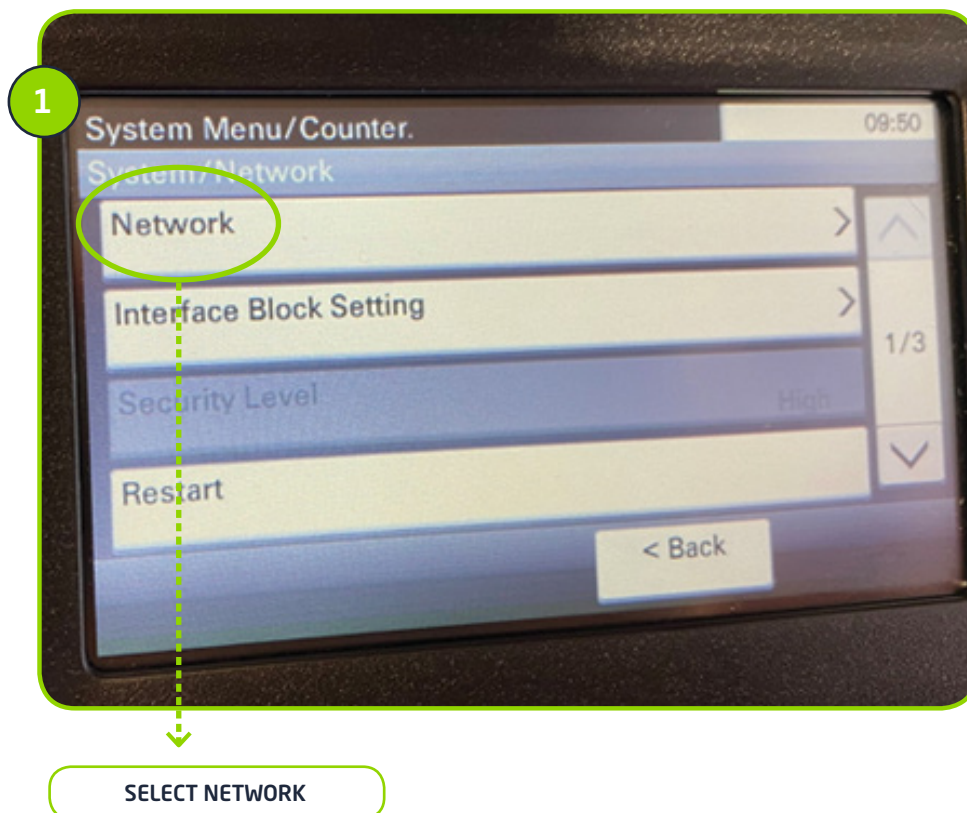

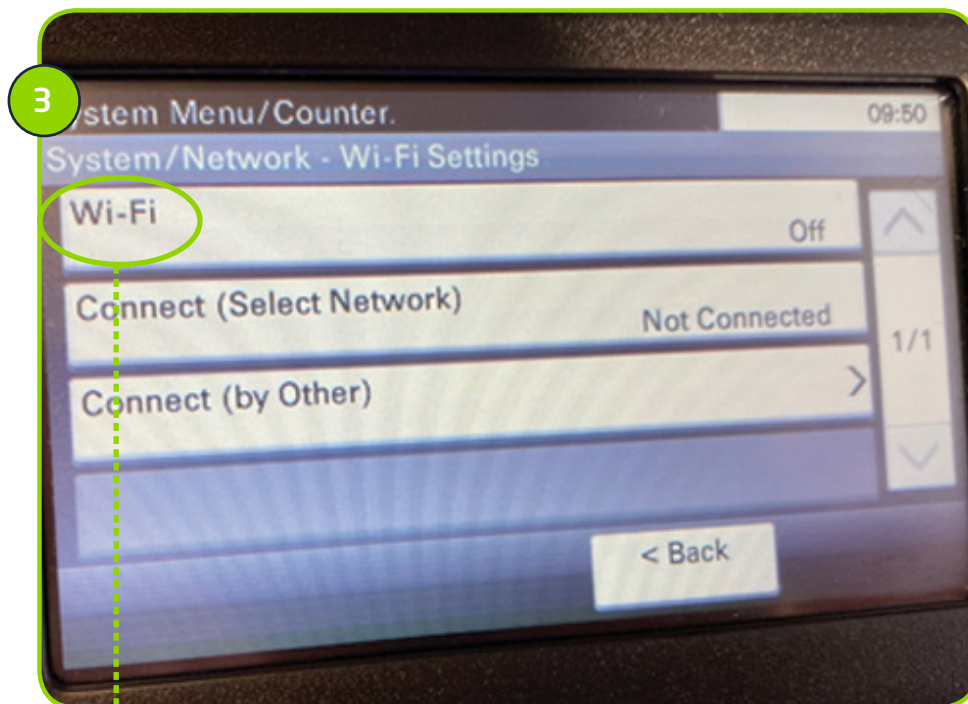


SELECT WI-FI. IF THE SETTING IS SET TO OFF, SELECT ON AND THE BELOW SCREEN WILL APPEAR

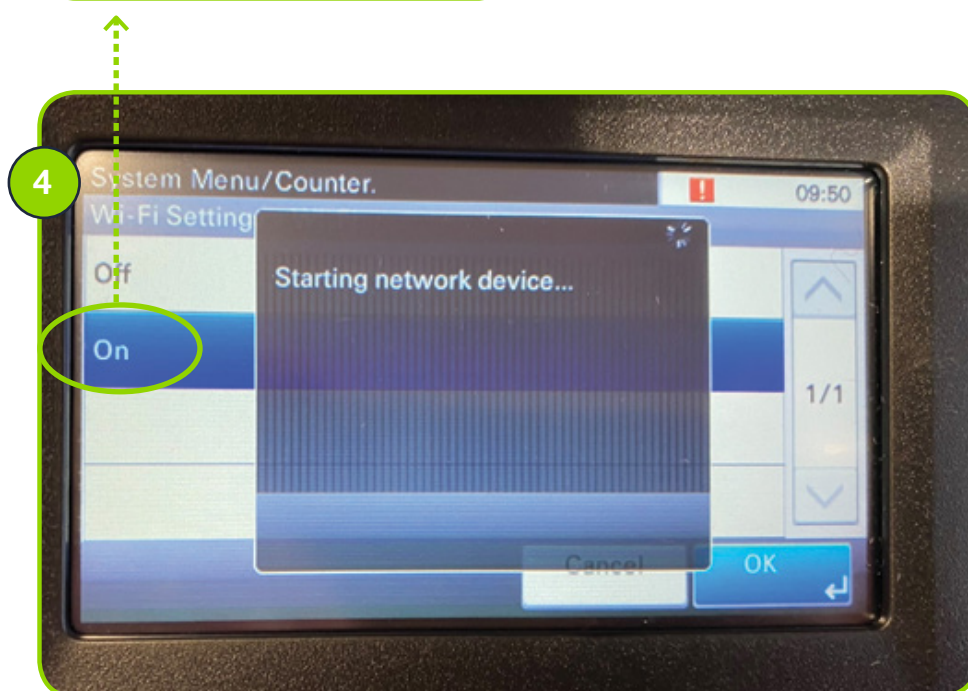


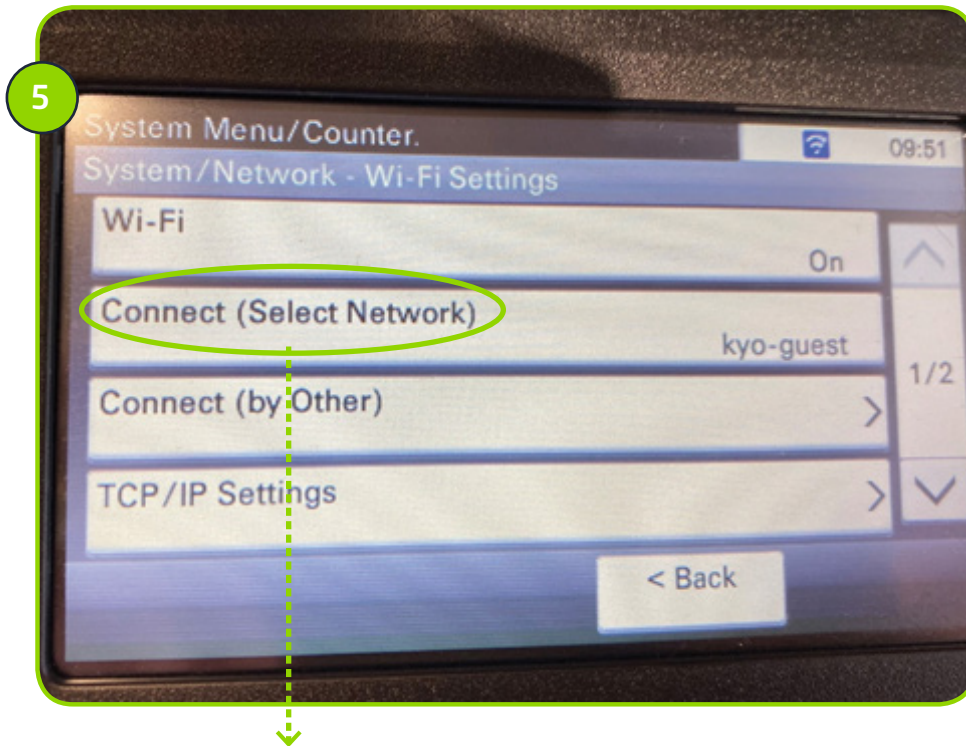


ONCE THE WI-FI SETTING HAS BE
ENABLED, THE NEXT STEP IS TO CONNECT
TO OR SELECT A WIRELESS NETWORK

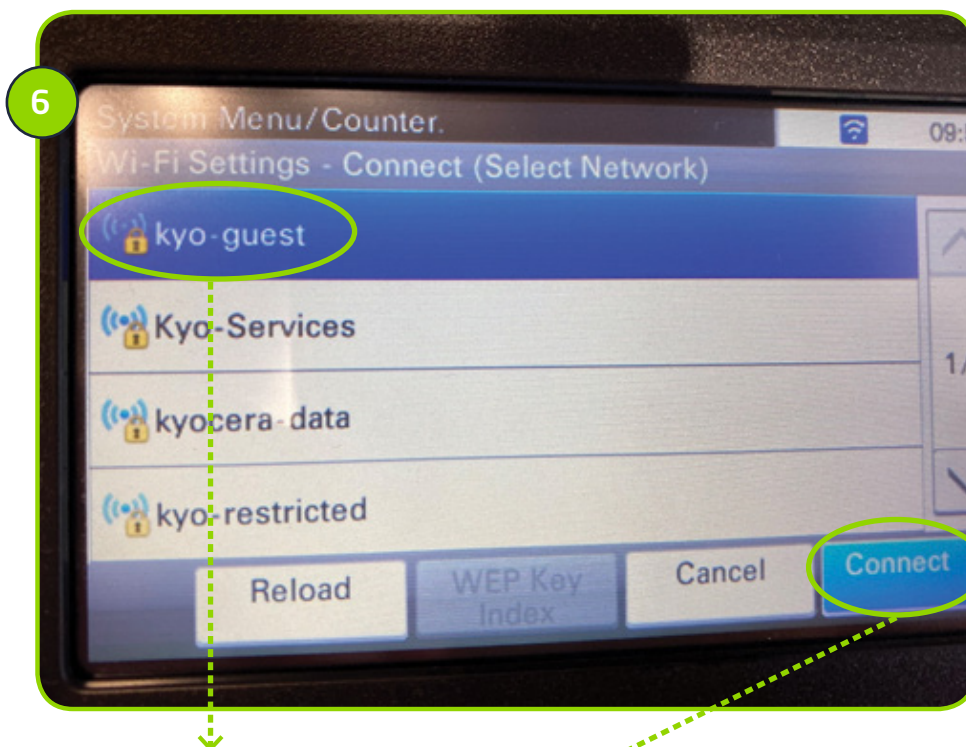

SELECT THE DESIRED NETWORK
AND THEN SELECT CONNECT

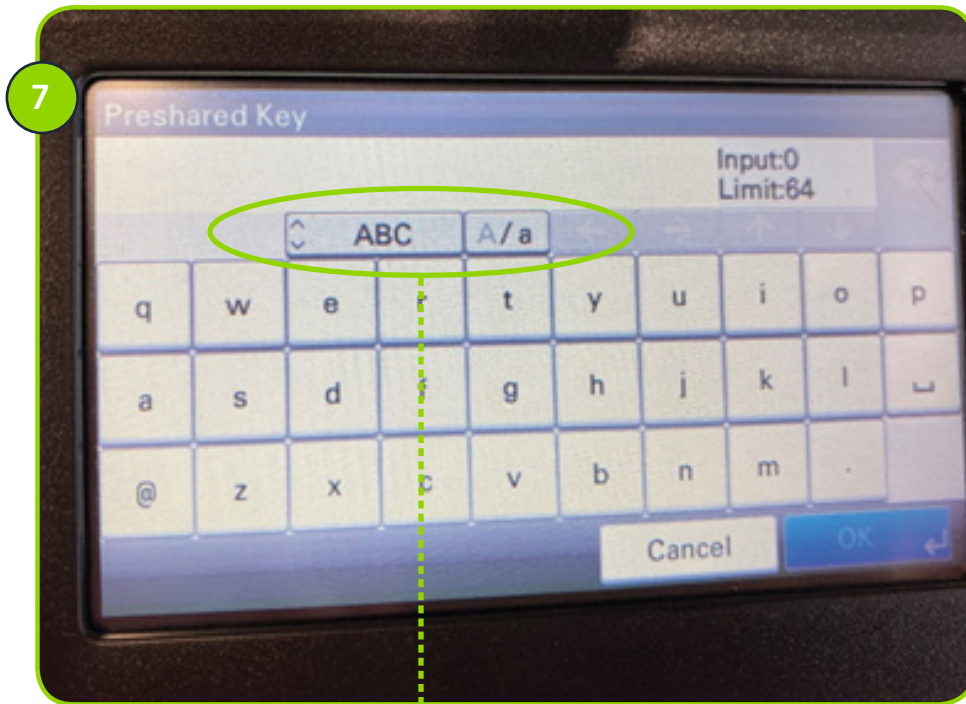


USING THE KEYBOARD, ENTER THE REQUIRED WI-FI PASSWORD. THE ABC TABS TOGGLES BETWEEN ALPHA AND NUMERIC KEYS. THE A/A TOGGLES BETWEEN UPPERCASE AND LOWERCASE. SELECT OK AND THE BELOW SCREEN WILL APPEAR

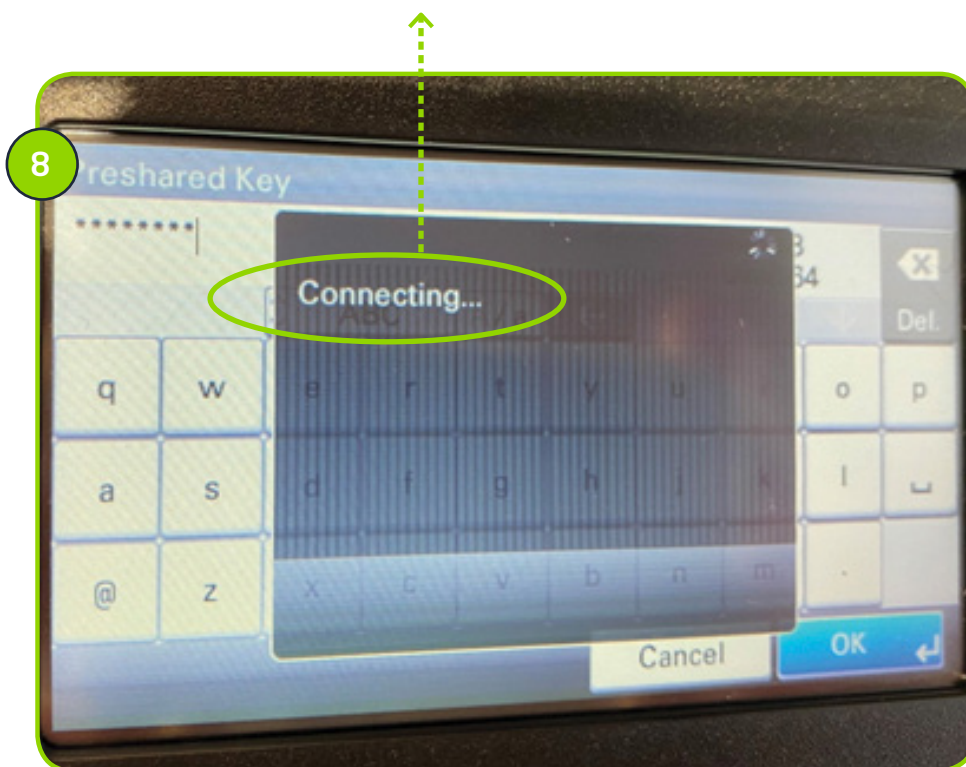



IF THE PASSWORD IS CORRECT, YOU WILL GET A CONNECTED MESSAGE WITH AN OPTION TO SELECT OK. IF THE PASSWORD IS INCORRECT, YOU WILL BE PROMPTED TO RE-ENTER THE PASSWORD.

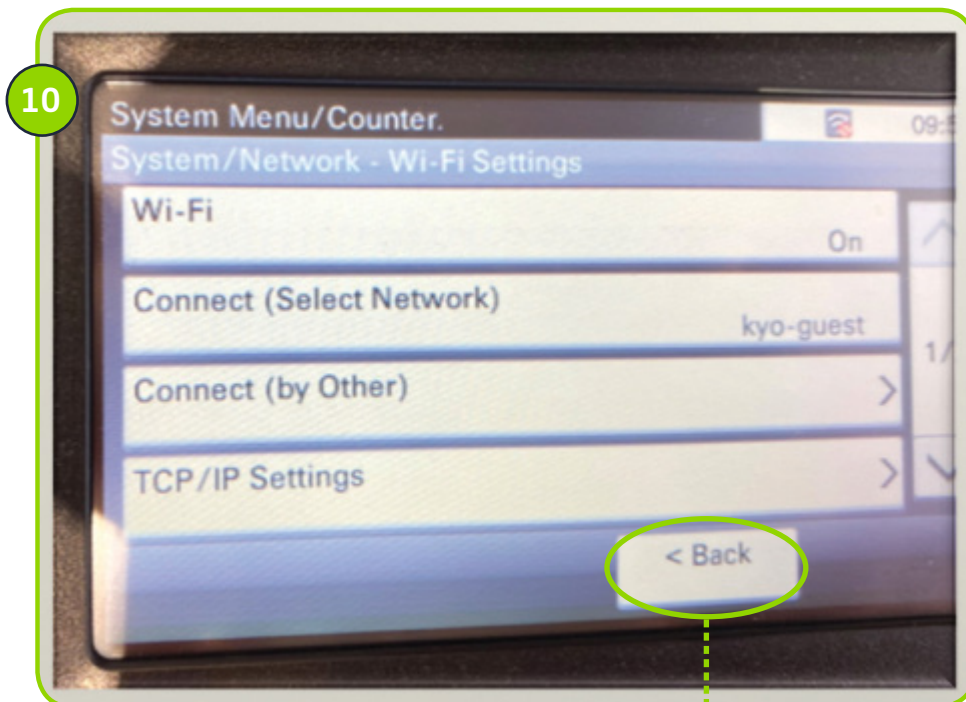

THE DEVICE IS NOW CONNECTED TO THE WI-FI NETWORK, YOU CAN SELECT <BACK AND EXIT THE SETUP MENU



ONCE BACK TO THE HOME SCREEN ON THE DEVICE, YOU WILL NOTICE THE FOLLOWING ICON THAT DEPICTS THAT THE DEVICE IS CONNECTED TO THE WI-FI NETWORK.

**For more information on complementary or
alternative products, visit us at vox.co.za**

New Business Sales JHB : +27 (0) 87 805 5050
Consumer Support : +27 (0) 87 805 0530
Business Support : +27 (0) 87 805 0500
Email: info@voxtelecom.co.za

